
PRF3145HW/ PRF3146HS/ PRF3147HB Parts List

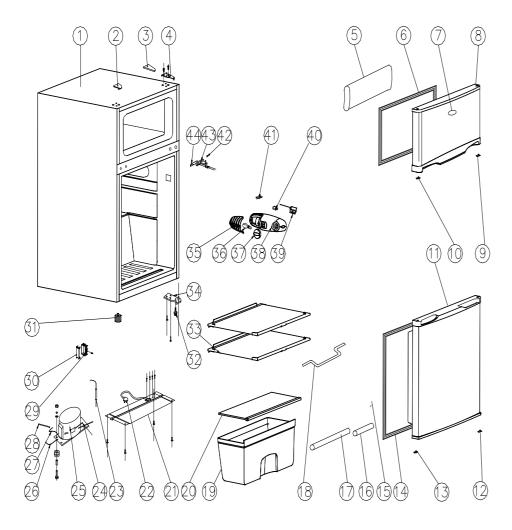

| | | - ~ | _ |
|-----|-------------|----------|------|
| No. | Description | of Spare | Part |

| 1 | Cabinet |
|----|--------------------------------|
| 2 | Cover of door hinge screw hole |
| 3 | Door hinge cover |
| 4 | Upper hinge assembly |
| 5 | Upper door bar |
| 6 | Upper door gasket |
| 8 | Upper door |
| 9 | Right limit block of door |
| 10 | Left limit block of door |
| 11 | Lower door |
| 12 | Lower door right aid-closer |
| 13 | Lower door left aid-closer |
| 14 | Lower door gasket |
| 15 | Drink bottle holder |
| 16 | Drink bottle holder bar |
| 17 | Short straight bar |
| 18 | Short curved bar |
| 19 | Crisper Box |
| 20 | Crisper box cover |
| 21 | Compressor support base |
| 22 | Power supply cord |
| 23 | Drier filter (for R600a) |
| 24 | Connecting tube (short) |
| 25 | Compressor(QD3511Y) |
| 26 | Earthing wire of compressor |
| 27 | Connecting wire of compressor |
| 28 | Process tube |
| 29 | Wire Box |
| 30 | Base of wire box |
| 31 | Long Adjustable Foot |
| 32 | Short Adjustable Foot |
| 33 | Shelves of fridge |
| 34 | Lower Door Hinge Assembly |
| 35 | Lamp cover |
| 36 | Lamp Bulb (E14,110V) |
| 37 | Thermostat knob |
| 38 | Thermostat cover |
| 39 | Thermostat |
| 40 | Lamp holder (E14) |
| 41 | Door switch |
| 43 | Middle hinge |
| 44 | Middle hinge bottom plate |